

# INTERCOM QUICK REFERENCE GUIDE

Urmet Aiko Monitor DS1716



## ANSWERING CALL

When intercom rings:

1. Press **Answer Button**

Confirm visitor identity

2. Press **Unlock Button**

Foyer doors will open and lifts will be unlocked to your floor

3. Press **Answer Button**

To disconnect when finished

## MUTE RINGER

Press **Mute Button**

Mute Indicator will show green and you will not hear the ring

To unmute press the Mute again

The Mute Indicator will switch off and you will hear the ring again


## AUDIO ADJUSTMENT

Press **Menu Button**

 
Use arrow buttons to select icons on the screen

Use the Unlock Button as the OK button

Select  and press OK

Select  and press OK

Select  to adjust ringer volume

Select  to adjust audio volume

Select BEEP ON or OFF to turn on/off the button beeping sounds

Press OK to confirm changes when finished

## VIDEO ADJUSTMENT

Press **Menu Button**

Use arrow buttons to select icons on the screen

Use the Unlock Button as the OK button

Select  and press OK

Select  and press OK

Adjust contrast, colour and theme as needed

Press OK to confirm changes when finished

Refer to PDF user manual on Globe website for other features and settings

